EXTRUDED ALUMINUM

PRODUCT DETAIL:

JMS — 3/8", 1", Siding Size

JMH — 3/8", 1-1/8", Siding Size
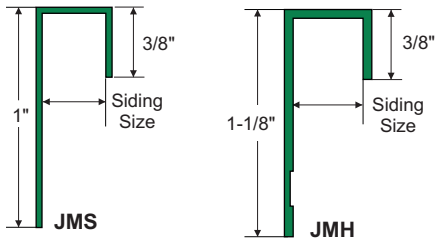
ITEM ID	SIDING SIZE	LENGTH
JMS5168	5/16" (8mm)	8'
JMS7168	7/16" (11mm)	8'
JMS588	5/8" (16mm)	8'
JMH51610	5/16" (8mm)	10'
JMH71610	7/16" (11mm)	10'
JMH5810	5/8" (16mm)	10'
JMH3410	3/4" (19mm)	10'
JMH110	1" (25.4mm)	10'

DESIGN FEATURES: Provides a clean finish at openings, edges of panels or planks and at material transitions.

JMH - Specifically designed to work in conjunction with other XtremeTrim® profiles.

JMS - True size designed as an independent profile. Use as a closure/cap piece only.

MATERIAL: JMH 6063 T-5 .050" (1.27mm) ± .005, JMS .037" (0.94mm) ± .005 extruded aluminum alloy with proprietary coating that protects against harsh weather conditions and allows for paint adhesion.

FINISH: Unless specified all XtremeTrim® items are provided in primed finish. Also available in popular siding/soffit colors in standard face only color match or full coverage CoastalColorCoating™. **JMH** - Clear Anodized is stocked and custom anodized is available (minimums apply).

FASTENERS AND FASTENING: Stainless steel fasteners are recommended. XtremeTrim® profiles may be secured in place with a few SS nails until fastened through panels and into studs during panel or plank fastening per siding manufacturer's instructions.

CUTTING & PAINTING: Use a non-ferrous carbide miter saw blade when cutting XtremeTrim®. Use Direct To Metal (DTM) paint when jobsite painting. See painting guide.

XTREMETRIM® BUTT JOINT: Sealant is required between butt joints where two trims come together. May also be further protected by use of a piece of XtremeFlashing™ behind the butt joint or with a metal flasher behind the joint.

NOTE: Do not install XtremeTrim® J mold on Horizontal applications where the exterior flange can catch water.

RECOMMENDED APPLICATION NOTES:

Please follow siding manufacturer's best practice guides when installing. XtremeTrim® profiles DO NOT form a moisture management system. The architect and builder are responsible for designing and installing a code compliant building envelope. Before installing XtremeTrim® use either a drainable housewrap or a standard housewrap with a rainscreen system if required by code or siding manufacturer.

Rafter
Soffit
XtremeTrim® J-Mold
Vertical Siding
TamlynWrap™ Drainable Housewrap
Wall Sheathing

XtremeTrim® J-Mold
Subfascia
Soffit Panel
TamlynWrap™ Drainable Housewrap
XtremeTrim® Siding H-Mold
Vertical Siding
XtremeTrim® J-Mold

XtremeTrim® J-Mold
TamlynWrap™ Drainable Housewrap
Wall Sheathing
Lap Siding
Brick Ledge Flashing